


- A. With the chair base (2) slot in the chair back (3) in the hole and insert 2 screws (6) to secure. Repeat this on both chairs.  
 B. Screw in the chair legs (5) into the blocks on the bottom of the chair base (2).  
 C. Screw in the table legs (4) into the blocks on the bottom of the table top (1).


3

## PARTS LIST

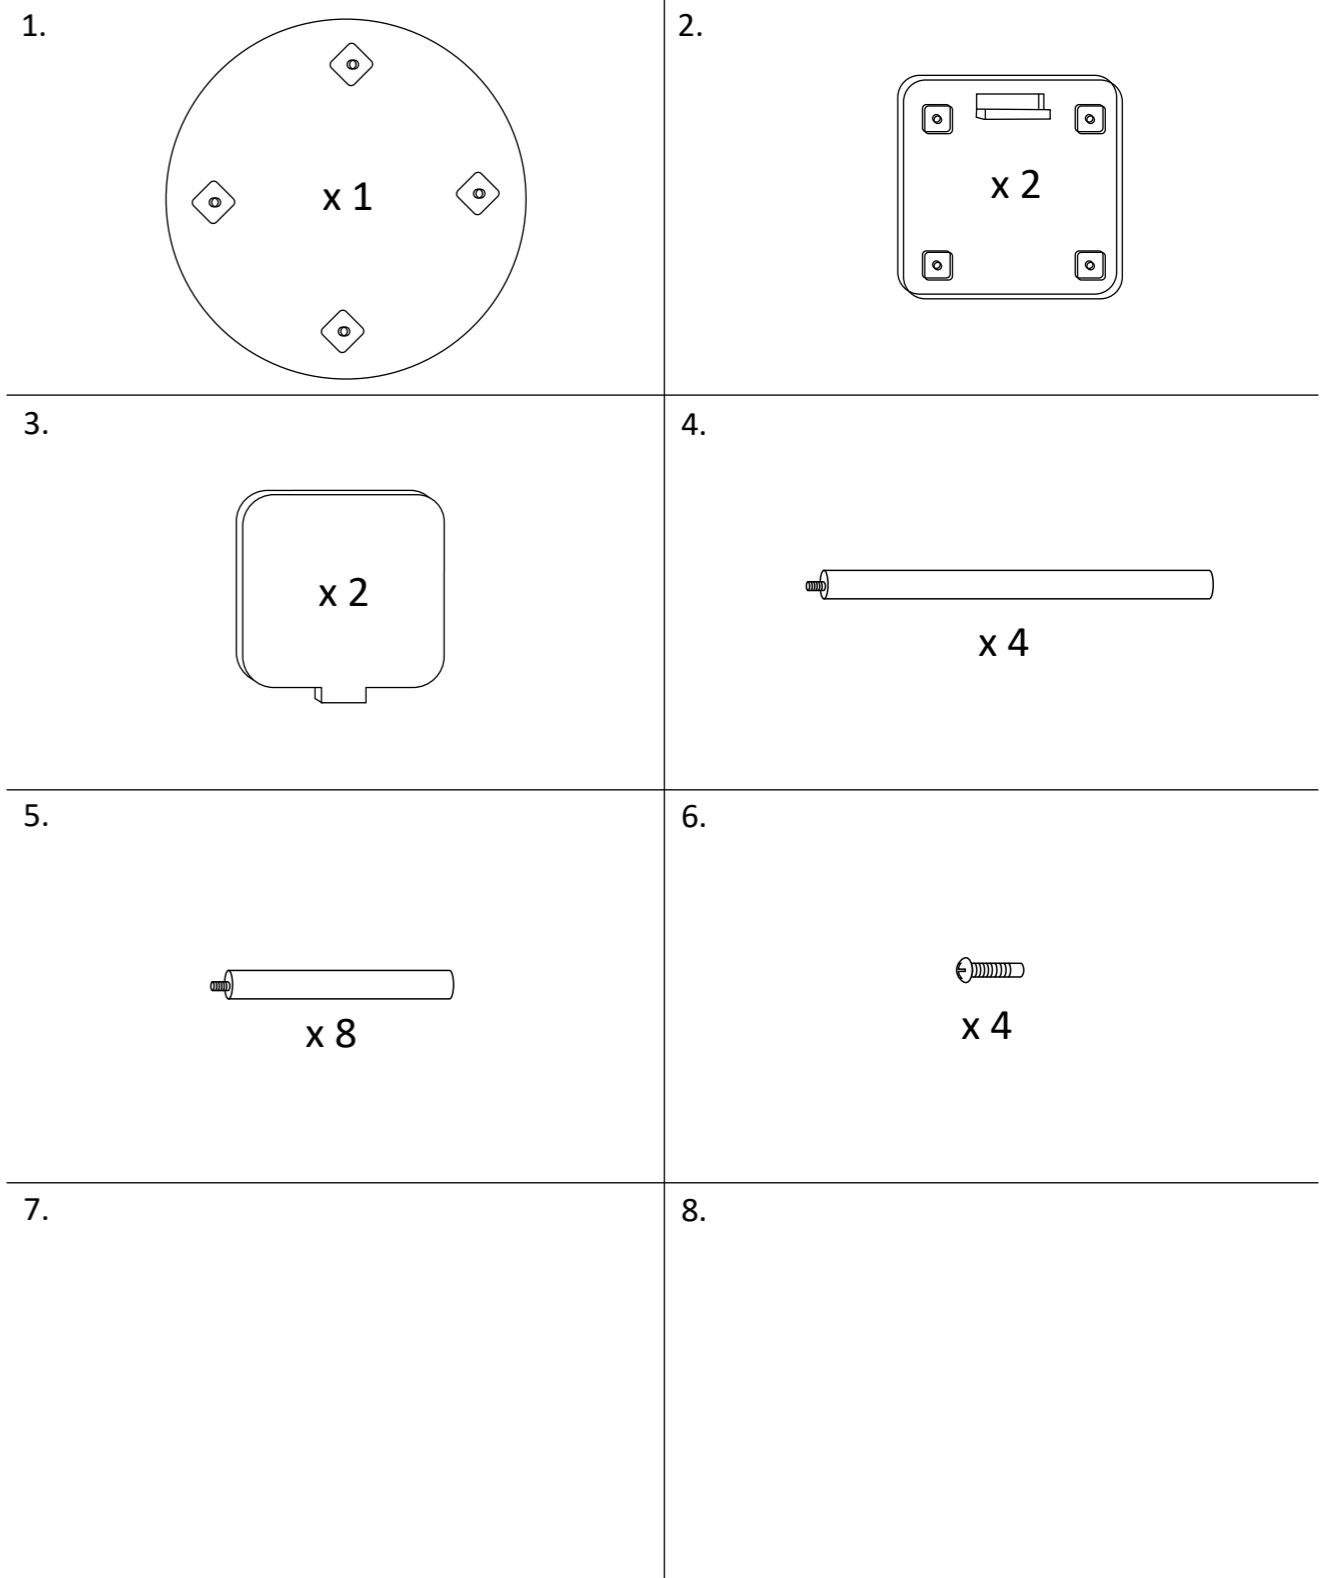

- |               |               |
|---------------|---------------|
| 1. Table Top  | 2. Chair Back |
| 3. Chair Base | 4. Table Leg  |
| 5. Chair Leg  | 6. Bolts      |
| 7.            | 8.            |

2

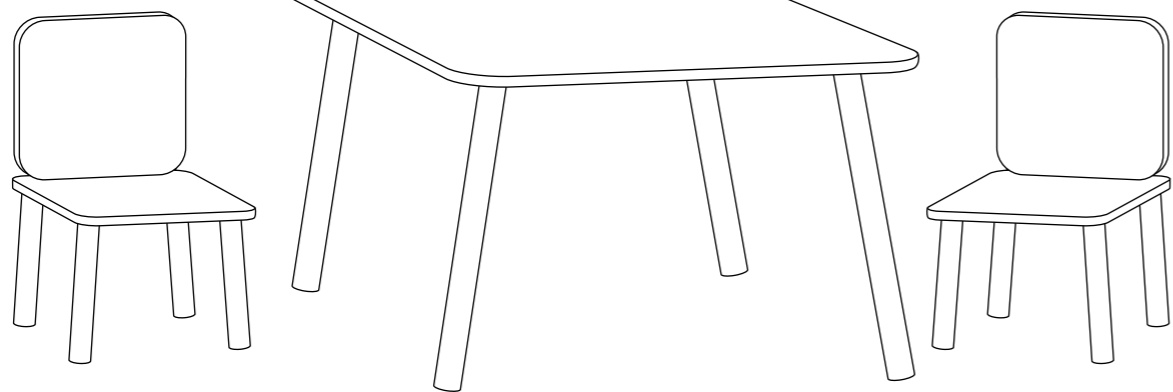

The table & chairs are now complete, please read the user guide notes to maintain the unit to its highest standard.

### USER GUIDE

Thank you for choosing a KIDSAW product. Please take a little time to read the important safety notes detailed below. This will ensure many years of happy, safe use.

#### SAFETY: TAKE NOTE

- Keep this product away from fire and direct heat sources.
- Only use spares approved by KIDSAW.
- Always clear the table & chairs before dismantling.
- Adult assembly required.

#### CARE & MAINTENANCE

- All surfaces should be wiped over using a damp cloth to clean.
- Never clean with abrasive, ammonia based, bleach or spirit type cleaner

4


IMPORTANT  
KEEP FOR FUTURE REFERENCE & READ CAREFULLY

# COUNTRY COTTAGE TABLE & CHAIRS

Follow us on  
facebook



[www.facebook.com/kidsaw](http://www.facebook.com/kidsaw)

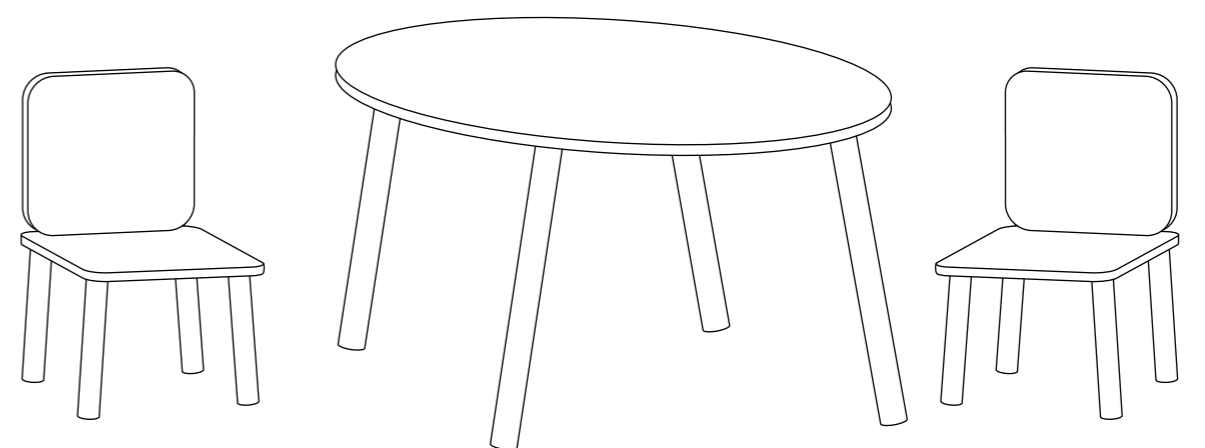

## INSTRUCTIONS

**KIDSAW**<sup>®</sup>  
MAKES FURNITURE CHILDS' PLAY

Kidsaw Ltd  
Tel: +44 (0)1455 848969 Email: [support@kidsaw.co.uk](mailto:support@kidsaw.co.uk)  
[www.kidsaw.co.uk](http://www.kidsaw.co.uk)